


## WIND GAGE

### ET1 WIND GAGE SETUP

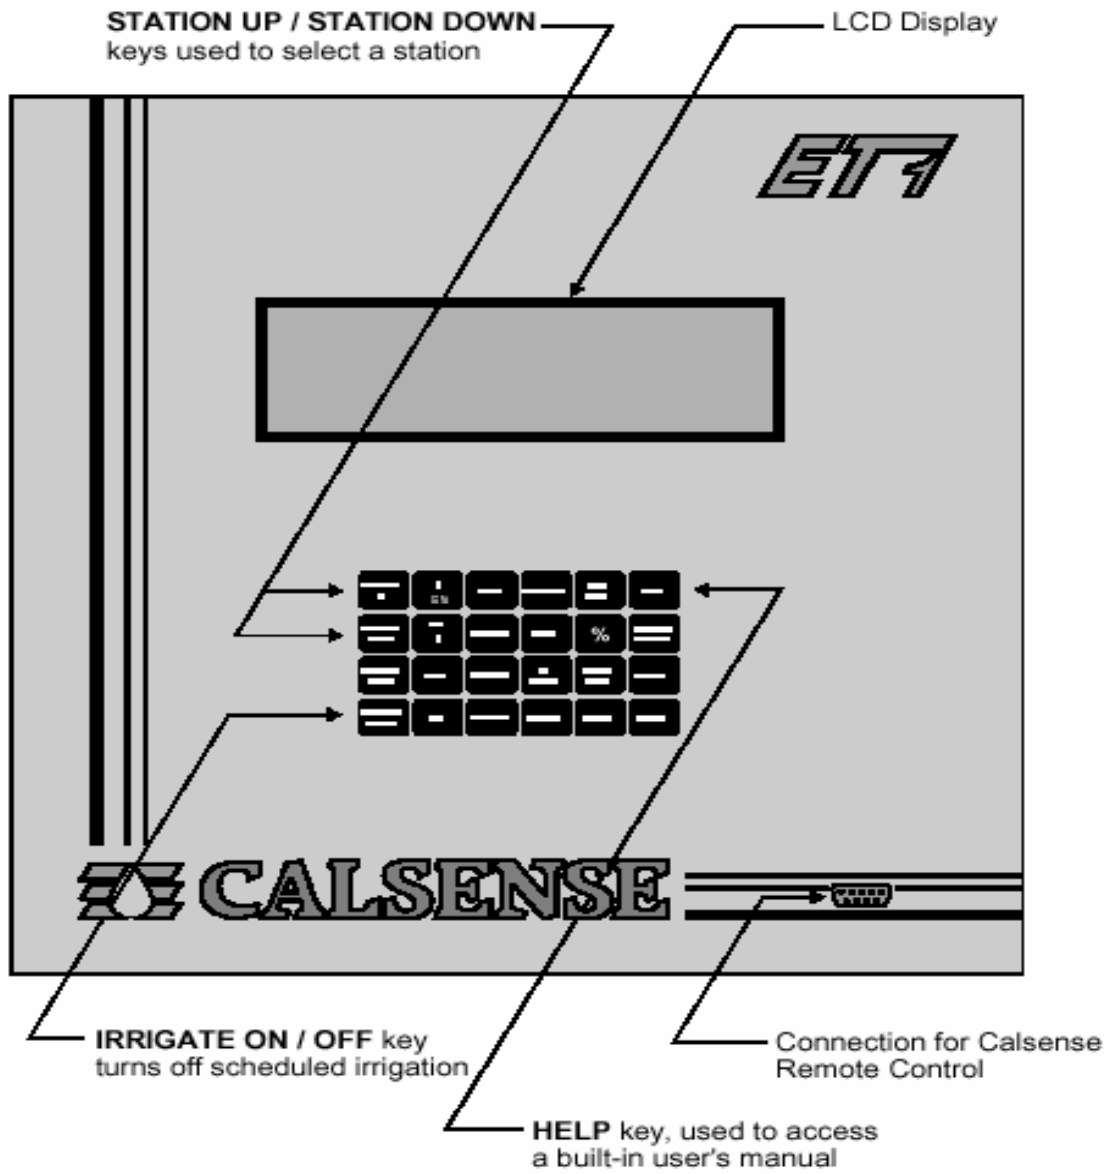

## WIND GAGE

### ET 1 WIND GAGE SET-UP

**ET1 SETUP KEY SEQUENCE:** After the Calsense Wind Gage is installed, it must be enabled and options set in the controllers set-up program. Enter set-up using the following.

#### ET1 SETUP KEY SEQUENCE

**IRRIGATE  
ON / OFF**

Press **IRRIGATE ON / OFF** (if the controller is turned off, this is not necessary)

**STATION  
UP**

Press **STATION UP**.

**STATION  
DOWN**

Press **STATION DOWN**.

**↑  
ON**

Press **ON / UP ARROW**, the set-up program screen will appear.

**ENTER**

Press the **ENTER** key until the **WIND SPEED SETUP** screen appears (shown on next page). This is the first in a series of screens that will need to be programmed if a Wind Gage is installed. Each screen is shown along with a description of the different options that can be set.

**ET1 SET-UP CHANGE KEY SEQUENCE:** All Changes in Set-up are made using the following procedures:

#### ET1 SETUP CHANGE SEQUENCE

**↑  
ON**

Press **ON / UP ARROW** to change a highlighted item.

**CHANGE**

Press **CHANGE** key to move the highlight to another item.

**ENTER**

Press **ENTER** when all changes have been made, and to move on to the next screen.

 **WIND GAGE SETUP:**

This section describes the steps necessary to set-up the controller to use wind. To use this feature, the controller must be connected to a Wind Gage, or hard wired to a controller that is connected to a Wind Gage.

Cycle through the SETUP screens until you come to the WIND SPEED: screen. (Figure 1).

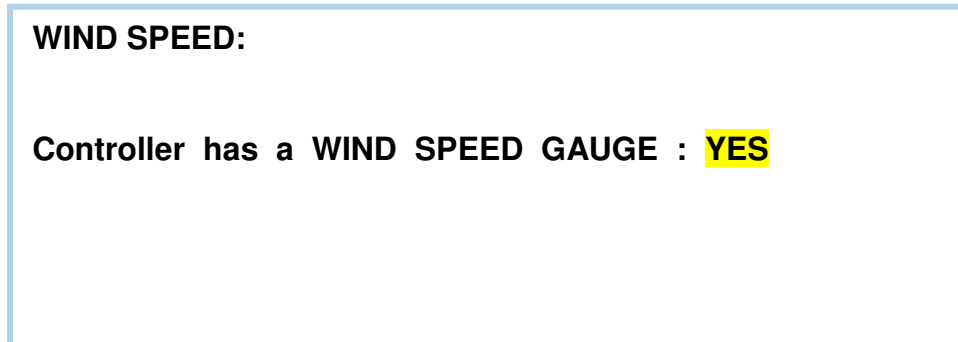
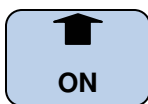
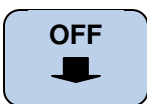



Figure 1

If you have a Wind gage connected to this controller and wish to use it, select YES. If not, change the setting to NO.

Use the  or  key to change the setting.

Press the  button to move to the next screen.

This will take you to the WIND SPEED SET-UP screen. (Figure 2).

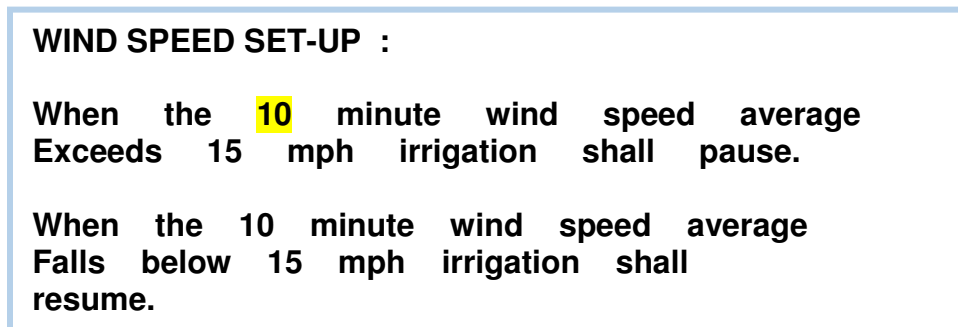





Figure 2


**Minute:** This is the amount of time limit that you want the controller to check the wind speed for prior to acting.

**Pause speed (mph):** This is the wind speed or above, at which you want all irrigation to temporarily pause.

**Resume speed (mph):** This is the wind speed, or below, that you want the irrigation to resume at.

Use the  or  key to change the setting.

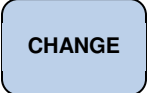Press the  button to move to the next entry.

Press the  button until you exit out of the SET-UP Mode.



2075 Corte del Nogal, Suite P, Carlsbad CA 92011  
1-(800)-572-8608 FAX: 1-(760)-438-2619  
[www.calsense.com](http://www.calsense.com)

Stock Number: PG1-WG-D1

Rev. 01/06