
RAIN BUCKET



TROUBLESHOOTING




RAIN BUCKET PARTS IDENTIFICATION

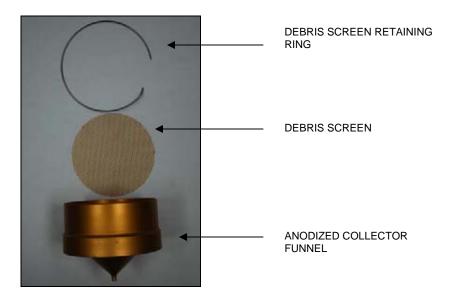



UPPER ASSEMBLY

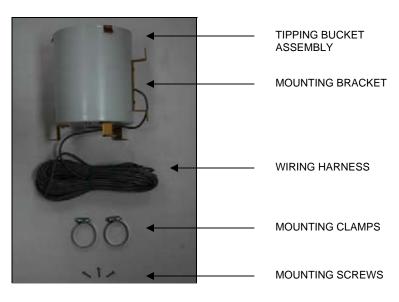

LOWER ASSEMBLY

POLE MOUNTED BUCKET



RAIN BUCKET TROUBLESHOOTING

REQUIRED TOOLS

- Digital Multi-meter.
- Common Screwdriver (small)
- Philips Screwdriver
- Wire Strippers
- 2 wire connectors
- 10" 14 AWG jumper wire



PROBLEM ZERO PULSES

Due to the RB-1 running on 5 volts DC the positive and negative wires must be matched throughout all the wiring when sharing with more than one controller. When wires are not matched up consistently throughout the system, the RB-1 will not be able to send rain readings.

Check the physical condition of the rain bucket. Check for damaged or broken wires.




ZY CALSENSE ®

CHECKING THE RAIN BUCKET STEP 1

Check for loose debris inside the Bucket on the collector screen.



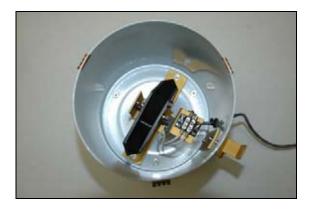

CHECKING THE RAIN BUCKET STEP 2

Check the Funnel and body for damage, or debris.


TROUBLESHOOTING AT THE CONTROLLER STEP 3

Disconnect the field wires from the Rain Bucket terminals at the controller.

Check for 5 VDC at the TP-1 Board terminals or –RB option wire harness coming from controller.




making water work since 1986

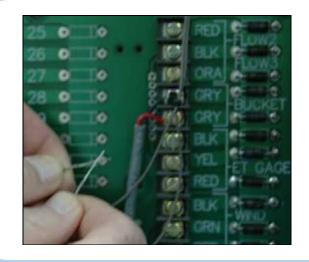

TROUBLESHOOTING AT THE CONTROLLER STEP 4

Disconnect the two grey –RB option wires from the controller wiring harness and tap them together twice. If using a TP-1 Board jumper the –RB option wiring posts together twice.

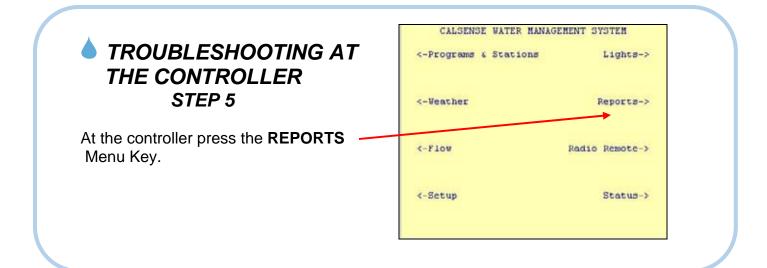



TROUBLESHOOTING AT THE CONTROLLER STEP 7

Prior to tapping the wires the screen should have read Tables: 0, Report: 0.

ET Ta	ble: (from 1	0/09/2	005 ba	ck)	
Sun	Sat	Fri	Thu	Ved	Tue	Mon
h.16	h.16	h.16	h.16	h.16	h.16	h.16
h.16	h.16	h.24	h.24	h.24	h.24	h.24
h.24	h.24	h.24	h.24	h.24	h.24	h.24
h.24	h.24	h.24	h.24	h.24	h.24	h.24
Rain	Table:	(tabl	e:0 r	eport:	0)	
Sun	Sat	Fri	Thu	Wed	Tue	Mon
	r.05	r.05	m.01	0.00	0.00	0.00
0.00	0.00	0.00	0.00	0.00	0.00	0.00
0.00	0.00	0.00	0.00	0.00	0.00	0.00
0.00	0.00	0.00	0.00	0.00	0.00	0.00


ET 18	able: (rrom 1	0/09/2	uus pa	ick)	
Sun	Sat	Fri	Thu	Wed	Tue	Mor
h.16	h.16	h.16	h.16	h.16	h.16	h.10
h.16	h.16	h.24	h.24	h.24	h.24	h.24
h.24	h.24	h.24	h.24	h.24	h.24	h.24
h.24	h.24	h.24	h.24	h.24	h.24	h.24
Rain	Table:	(tabl	e:0 r	eport:	2)	
Sun	Sat	Fri	Thu	Wed	Tue	Mon
	r.05	r.05	m.01	0.00	0.00	0.00
0.00	0.00	0.00	0.00	0.00	0.00	0.00
0.00	0.00	0.00	0.00	0.00	0.00	0.00
0.00	0.00	0.00	0.00	0.00	0.00	0.00

TROUBLESHOOTING AT THE CONTROLLER STEP 8

After tapping the two grey wires together the screen should read Table: 0, Reports : 2 after two minutes have passed.

TROUBLESHOOTING AT THE CONTROLLER STEP 9

Again tap the two grey –RB option wires together twice. If using a TP-1 Board jumper the –RB option terminal posts twice.

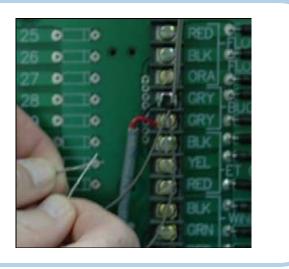

	more: ()	from 1	0/09/2	005 ba	ck)	
Sun	Sat	Fri	Thu	Ved	Tue	Mon
h.16	h.16	h.16	h.16	h.16	h.16	h.16
h.16	h.16	h.24	h.24	h.24	h.24	h.24
h.24	h.24	h.24	h.24	h.24	h.24	h.24
h.24	h.24	n.24	h.24	h.24	h.24	h.24
Rain	Table:	(tabl	e:0 r	eport:	4)	
Sun	Sat	Fri	Thu	Wed	Tue	Mon
	r.05	r.05	m.01	0.00	0.00	0.00
		0.00	0.00	0.00	0.00	0.00
0.00	0.00				0.00	0.00
	0.00		0.00	0.00	10 - 10 - 10	

TROUBLESHOOTING AT THE CONTROLLER STEP 10

View the controller screen. It should read Table: 0, Reports: 4 after two minutes.

TROUBLESHOOTING AT THE CONTROLLER STEP 11

If no change is noticed on the controller screen after following these steps. Contact Calsense at 1-(800)-572-8608 for further assistance.

This concludes Rain Bucket Troubleshooting





2075 Corte del Nogal, Suite P, Carlsbad CA 92011 1-(800)-572-8608 FAX: 1-(760)-438-2619 www.calsense.com

Stock Number: PG1-RB-E

Rev. 03/06

